

TV 150

HiFi-Stereo-
Kopfhörer

Hi-fi stereo
headset

Casque
hifi stéréo

Hifi-stereo-
koptelefoon

Bedienungsanleitung

User Guide

Mode d'emploi

Handleiding



Übersicht

At a glance

Aperçu

 
 
 
Overzicht

Diese Ausklappseite zeigt Ihnen eine Übersicht über Ihr TV 150.

Please open this page for “At a glance” guide to your TV 150.

Cette page dépliant vous offre un aperçu de votre TV 150.

Dit uitvouwblad toont u een overzicht van uw TV 150.

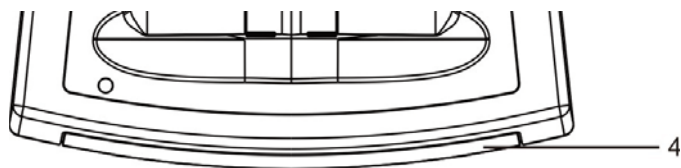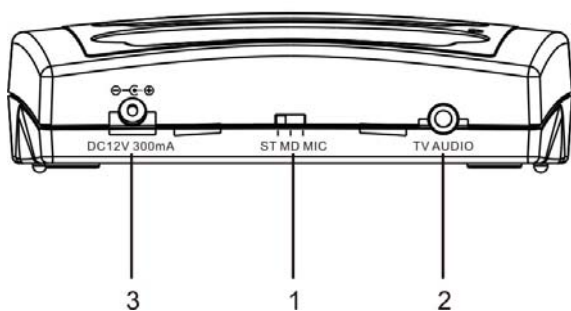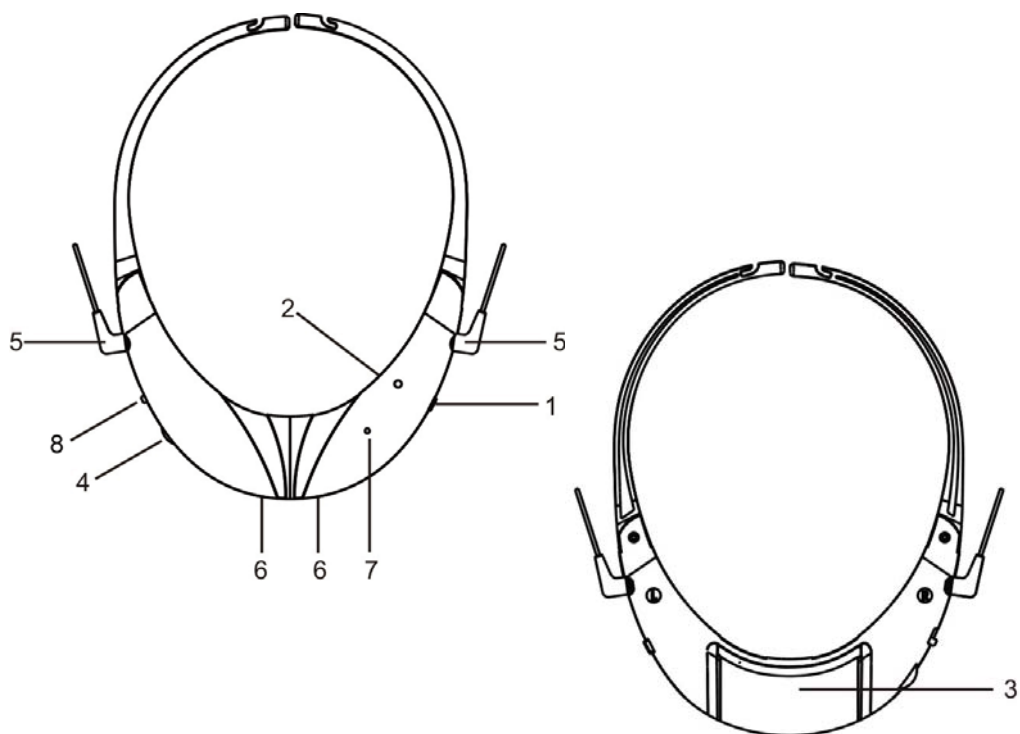

Receiver

- 1 On/Off pushbutton
- 2 Power supply indicator
- 3 Battery compartment (rear)
- 4 Volume control
- 5 Connectors for earphones
- 6 Charging contacts
- 7 Charging indicator
- 8 Tone control

Transmitter base

- 1 Input selector switch (Stereo/Mono/Microphone)
- 2 Audio-in jack
- 3 AC adapter jack
- 4 IR transmitter window

Box contents

You should have:

 
- 1 Receiver
- 1 Transmitter base
- 1 AC adapter for the transmitter
- 2 Rechargeable batteries for the receiver
- 2 Earphones
- 1 Audio cable
- 1 Audio adapter
- 4 Earbud covers (spare)
- 1 User guide

Getting started

Getting started

Important: please make sure you've read the safety information on page 22 before you set up your device.

Connecting the transmitter

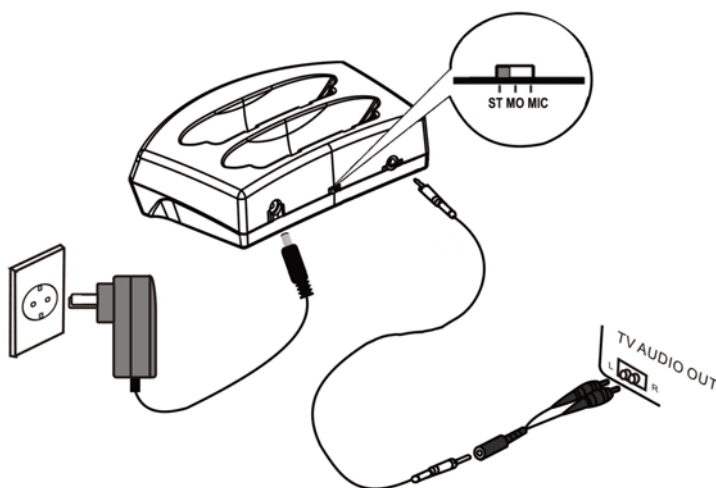

Option 1

- 1 Set the selector switch on the transmitter base to stereo mode (ST).
- 2 Use the provided audio cable (and audio adapter, if necessary) to connect "TV Audio" on the transmitter base to the audio-out jacks on your TV as shown.
- 3 Connect and plug in the AC adapter as shown. The IR diodes glow behind the IR transmitter window as long as the TV/sound source is on to indicate that signals are being transmitted.
- 4 Set the TV volume to a comfortable level. On many TV sets, you may "Mute" the TV speaker output and still be able to hear via the TV 150.

Option 2


- 1 Same procedure as Option 1, except that you plug the audio cable into the headphone port (usually located at the front of your TV). If you use this connection mode, adjust the volume of the headphone output to a medium level. If this connection mutes the TV speaker sound, you can deactivate the muting function by using the TV setting menu.

Option 3

- 1 If your TV does not have a headphone or audio output jack, you can place an optional microphone module directly in front of the TV loud-speaker to pick up the sound for transmission. Connect the other end of the microphone module to "TV Audio" at the rear of the transmitter base. Set the selector to the MIC position.

Placement of the transmitter base

 Place the transmitter on top of your TV or on your TV stand so that its front (line of sight) is pointed directly at the viewer. Make sure there is nothing in front of the receiver blocking the path. The powerful transmitter can cover any room size up to 30 ft. x 30 ft.

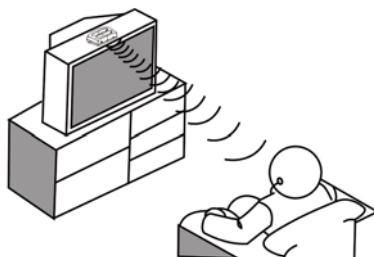


Setting up the receiver

Connect the earphones to the respective jack on the receiver.

Pay attention to the matching labeling because the earphones are ergonomic. This increases the wearing comfort.

Inserting and charging the rechargeable batteries

 - 1 Open the battery compartment.
 - 2 Insert the rechargeable batteries. Pay attention to the correct polarity.
 - 3 Close the battery compartment.
 - 4 Make sure the batteries are charged for at least 8 hours before first use.
- Place the receiver into the transmitter base as shown. The charging LED indicator lights up as long as the receiver is placed in the transmitter base for recharging.

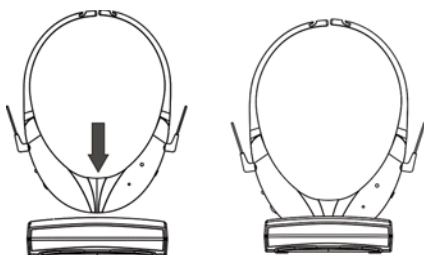

Additional receivers (headsets)

 
You can use any number of receivers (headsets) with one transmitter. An additional receiver (headset) is available at your dealer.

Your TV 150-transmitter can charge the rechargeable batteries of two receivers (headsets) simultaneously.

Operating the receiver

Operating the receiver

Always set the volume to a low level to protect your hearing from sudden loud sounds before putting on the ear buds.

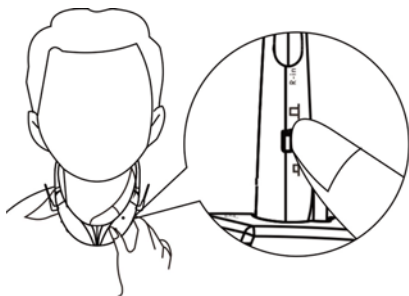

- 1 Place the receiver gently on your shoulder and press the On/Off button to turn on the receiver. The On/Off indicator will light up.
- 2 Put the ear buds into your ears.
- 3 Adjust the sound level to a comfortable level.
- 4 Set the tone control to a position that enables you to hear and understand all the dialogues best.

- **Fully charged batteries provides up to 25 hours of listening enjoyment.**
- **To conserve battery power, the receiver automatically shuts off if no IR signal is detected for a period of 40 - 80 seconds.**

Appendix

Appendix

Safety Information

Please read this operating instruction manual thoroughly.

Intended use

This device was developed to transmit audio signals from an audio source like TV or HiFi device to a receiver, using IR transmission. Any other use is considered unintended use.

Unauthorised modification or reconstruction is not permitted. Under no circumstances open the devices or complete any repair work yourself.

Installation location and safety information

- Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- Furniture polish, over time, may disintegrate the rubber feet of the transmitter which may stain your furniture. To avoid a potential stain, you may want to place the transmitter on a pad or mat.
- This listener allows you to amplify sounds to a loud volume, but listening to earphones at a high volume over an extended period of time may damage your hearing; especially in children. Thus, we suggest that you set the volume to a level that is comfortable to your hearing.

Power adapter plug

Attention: Only use the power adapter plug contained in the material supplied since other power adapter plugs could damage the transmitter. Ensure access to the power adapter plug is not obstructed by furniture or such.

Pay attention that the plug and cable are in perfect condition. Kinked or worn cable represents the risk of a fatal accident!

The power adapter plug supplied fulfils the ecodesign requirements of the European Union (Directive 2005/32/EC). This means that, both in an operating state and in an idling state, the power consumption is considerably lower compared to power adapter plugs with an older design.



- Energiesparend
- Economisant l'énergie
- A risparmio di energia
- Energy efficient

Rechargeable batteries

Attention: Never throw batteries into a fire. Only use batteries of the same type! Pay attention to correct polarity.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old **electronic and electrical devices** in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!



Batteries represent a hazard to health and the environment!

Never open, damage or swallow batteries or allow them to pollute the environment. They may contain toxic, ecologically hazardous heavy metals. You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points provided by local public waste authorities. Disposal is free of charge. The adjacent symbols indicate that the batteries must not be disposed of in normal domestic waste and must be brought to collection points provided by local public waste authorities.



Packaging materials must be disposed of according to local regulations.

Helpline

If you need some help and you're in the UK, please first check and see if your problem can be solved using the troubleshooting guide below. If it can't, please call us on 0844 800 6503 (using a UK landline, at the time of going to print: calls cost 6p for connection charge and then 5p a minute. Mobile costs may vary). Lines are open Monday to Friday, 9am to 5pm, excluding public holidays.

If you've a claim on your 2-year guarantee, please contact your supplier.

Declaration of conformity

This device fulfils the requirements stipulated in the EU directive:

1999/5 EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Conformity with the above mentioned directive is confirmed by the CE symbol on the device.



To view the complete Declaration of Conformity, please refer to the free download available on our website **www.amplicomms.com**

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth.
- Never use cleaning agents or solvents.

Technical data

Input selector switch	ST = Stereo (for Stereo input) MO = Mono (for Mono input) MIC = Microphone (for microphone module)
Modulation	FM Stereo
Frequency	2.3 / 2.8 MHz
Range	up to 30 ft.
Power supply (transmitter)	Power adapter plug, Output: 12 VDC, 400 mA
Receiver battery life	Fully charged batteries up to 25 hours
Charging time	For empty batteries approx. 8 hours
Weight	Transmitter: approx. 190 g Receiver: approx. 80 g

Accessories / Spare parts

Additional receiver: TV 150-1
 Microphone module: TV 150-MIC
 Replacement ear-buds (one pair): TV 150-EB
 Replacement earbud covers (3 pairs / 1 pair each S, M, L): TV 150-EBC

These accessories and spare parts are available at your AMPLICOMMS dealer or call the Helpline UK.

Guarantee

AMPLICOMMS equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble free functioning and a long service life.

The terms of the guarantee do not apply to the rechargeable batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies resulting from material or production faults which occur during the period of guarantee will be eliminated free of charge. Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee.

In the case of complaints, we reserve the right to repair or replace defect parts or provide a replacement device. Replacement parts or devices become our property.

Rights to compensation in the case of damage are excluded where there is no evidence or intent or gross negligence by the manufacturer.

If your equipment shows signs of defect during the period of guarantee, please return to the sales outlet in which you purchased the AMPLICOMMS equipment together with the purchase receipt. All rights to claims under the terms of guarantee in accordance with this agreement must be asserted exclusively with regard to your sales outlet.

Two years after the purchase of our products, claims under the terms of guarantee can no longer be asserted.

Notes



Vertrieb: Audioline GmbH, D-41460 Neuss

August 2011 – Ausgabe 1.1

